


# QUICK START

1. Remove both bottom covers
2. Install 2 AAA Batteries
3. Press Control Button
4. Open front door, LED should be blinking Blue
5. Slowly swipe your fingerprint over the scanner  
This will take up to 10 swipes to build your file
6. When LED goes solid Blue you are registered
7. To open Press start button (the LED) and slowly swipe the scanner

Any problems or questions please refer to the enclosed instructions

If all works we suggest you scan the instructions anyway

Control Button

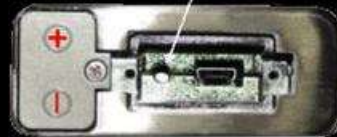

start button

